FOSBERY
STUDIO

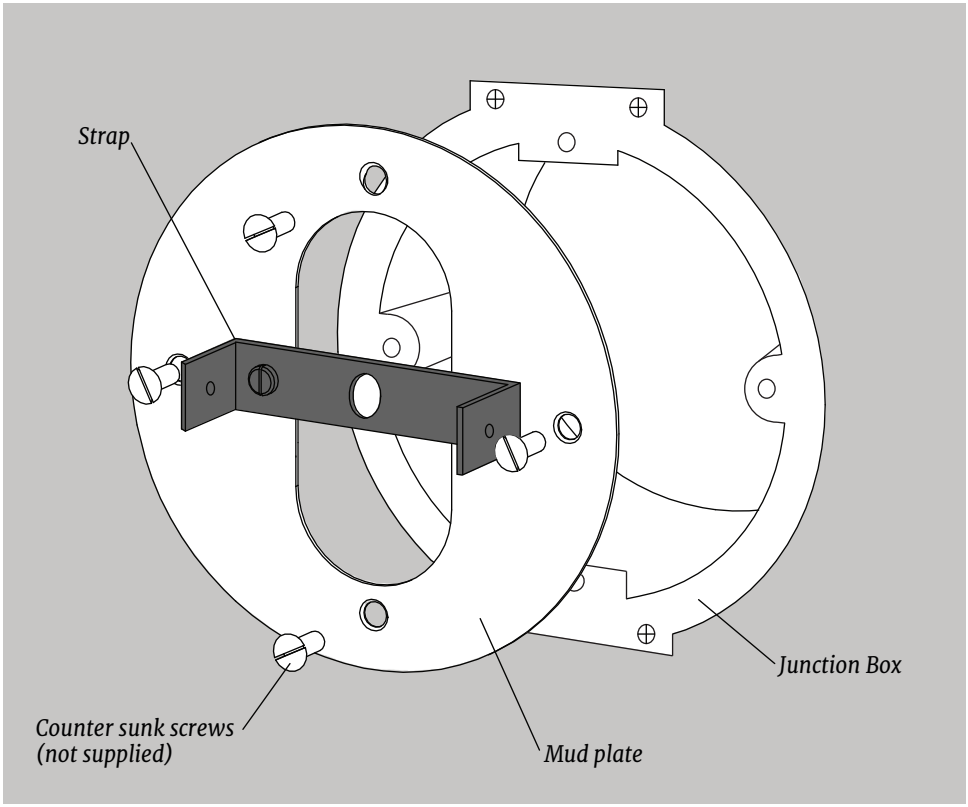

MUD PLATE FITTING INSTRUCTION

We have created and supplied our 'Mud Plate' to help with the fitting of our smaller backplates to the larger USA 4" round junction boxes. Please take note that this will require extra finishing and painting.

1. *Unscrew the Mud Plate from the light.*
2. *Remove the Strap from the Mud Plate.*
3. *Attach the Mud Plate to the junction box using countersunk screws (not supplied).*
4. *Mud over the Mud Plate, filling the gap around the outer edge. Feather the joint compound flat, and clean out the inside opening so the box remains accessible.*
5. *Once dry, paint over the area and re-attach the strap.*
6. *Make the electrical connection within the junction box.*
7. *Fix the light to the strap with the supplied countersunk screws.*

CLIPPED TERMINAL BLOCKS ARE INCLUDED, INSTALLATION SHOULD BE CARRIED OUT BY A QUALIFIED ELECTRICIAN. ENSURE ALL POWER TO THE AREA IS OFF BEFORE WORKING.